


NODE 1 INTERNAL LIGHT LOCATIONS

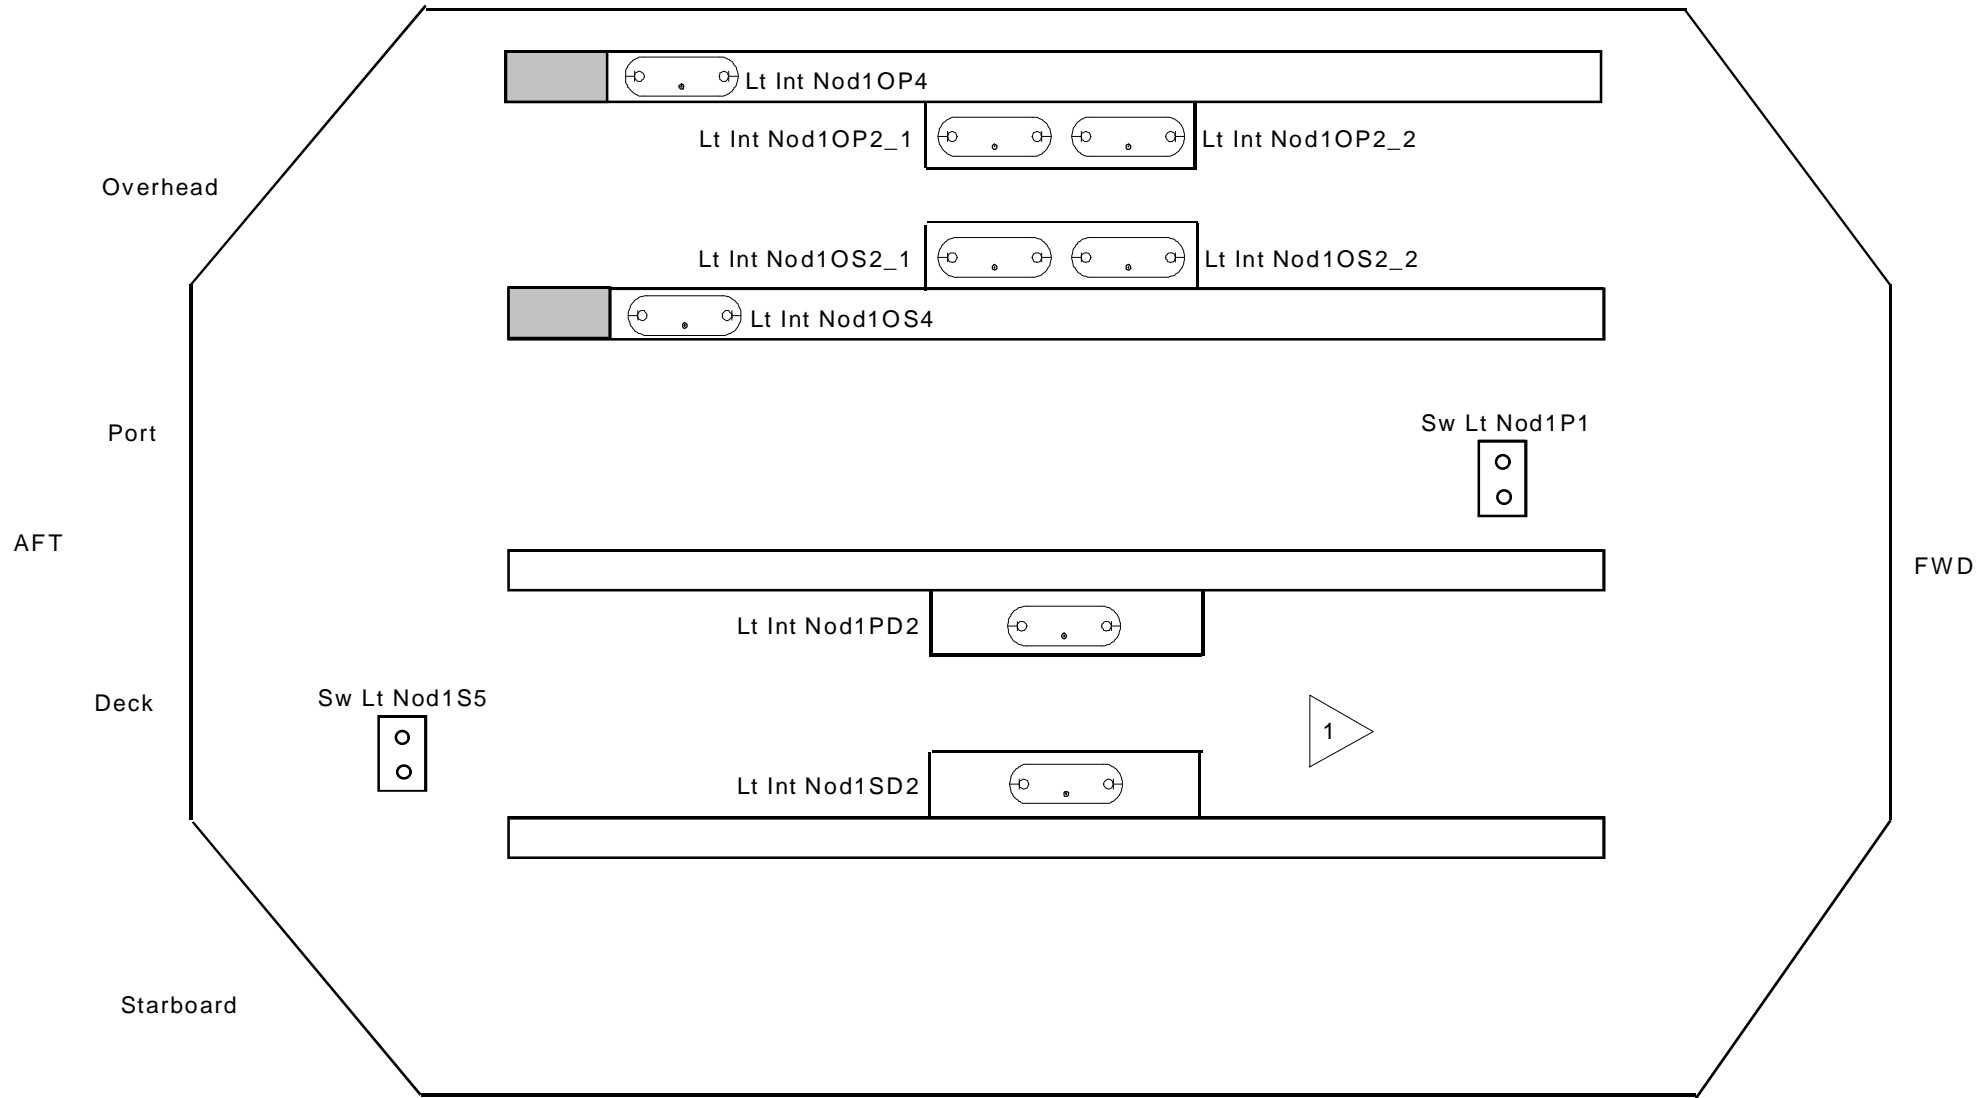

The Sw Lt Int Nod1D2 master switch is not shown on this drawing, it is located on the Deck hatch near the starboard side

This Page Intentionally Blank